



MANUFACTURED HOUSING - Tips of the Trade ✓

Cut Batts to Fit Irregular Cavities

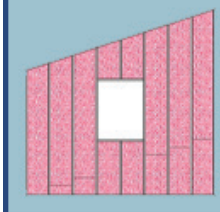

Bad fit =
→
Cold spots

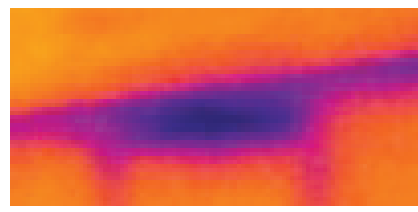

✓ **1.** Place batt over framing cavity.



✓ **2.** Use wall framing as a cutting guide.



✓ **3.** Press the batt into the cavity and fluff to fill the cavity.



✓ **4.** Use full length batts where possible. Put short pieces to bottom of wall.



✓ **5.** Cut batts to fill angles and fit around extra framing



✗ **Don't leave the batt compressed. Fluff it to fill the cavity.**